
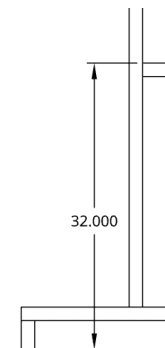


Assembly Notes:
 1. Assemble Conveyor Mount Support Assembly to Frame Assembly
 using (2) Anchor Assemblies per 21" support.

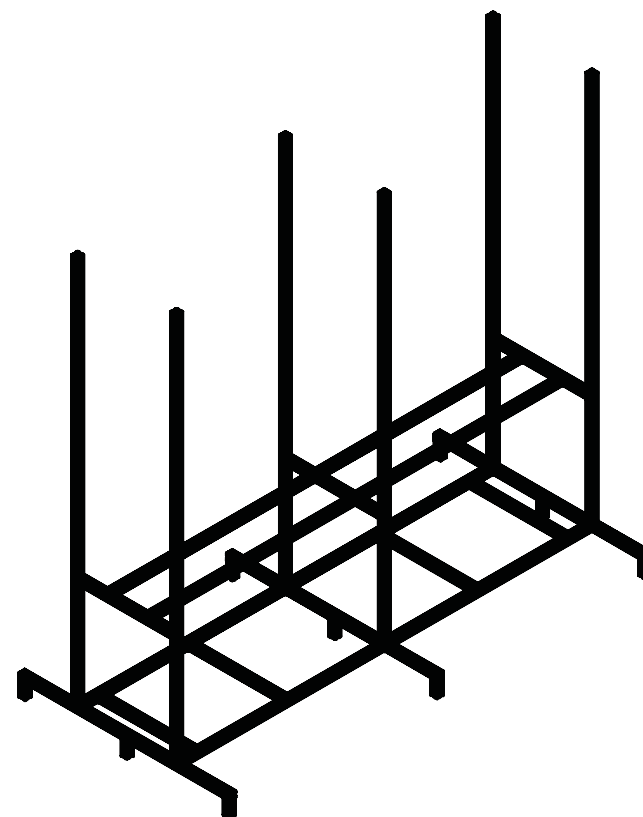

ASSEMBLE CONVEYOR SUPPORT ASSEMBLY TO FRAME

DWG NO:

MD-06-T

REVISION:

A

intelitek▶▶

1600 Maintenance Cell